

FLEXTAIL™

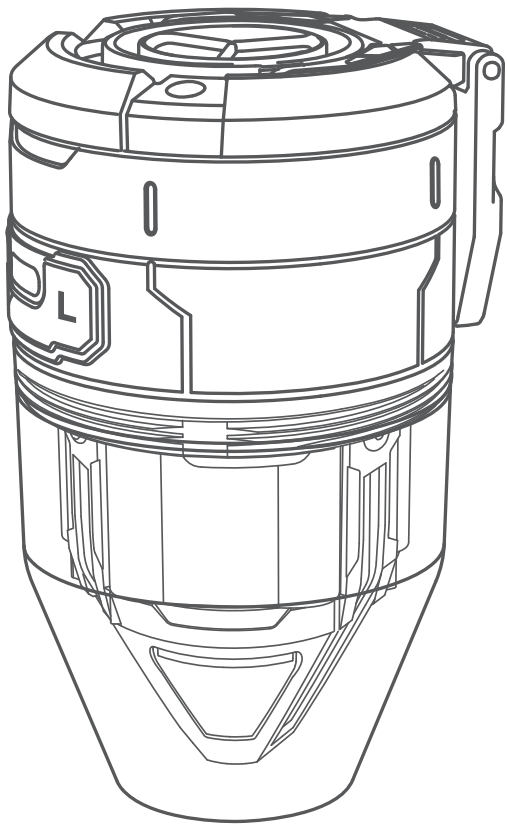


The Guide Of MAX PUMP 3


MP3G650IN03

PRODUCT INTRODUCTION

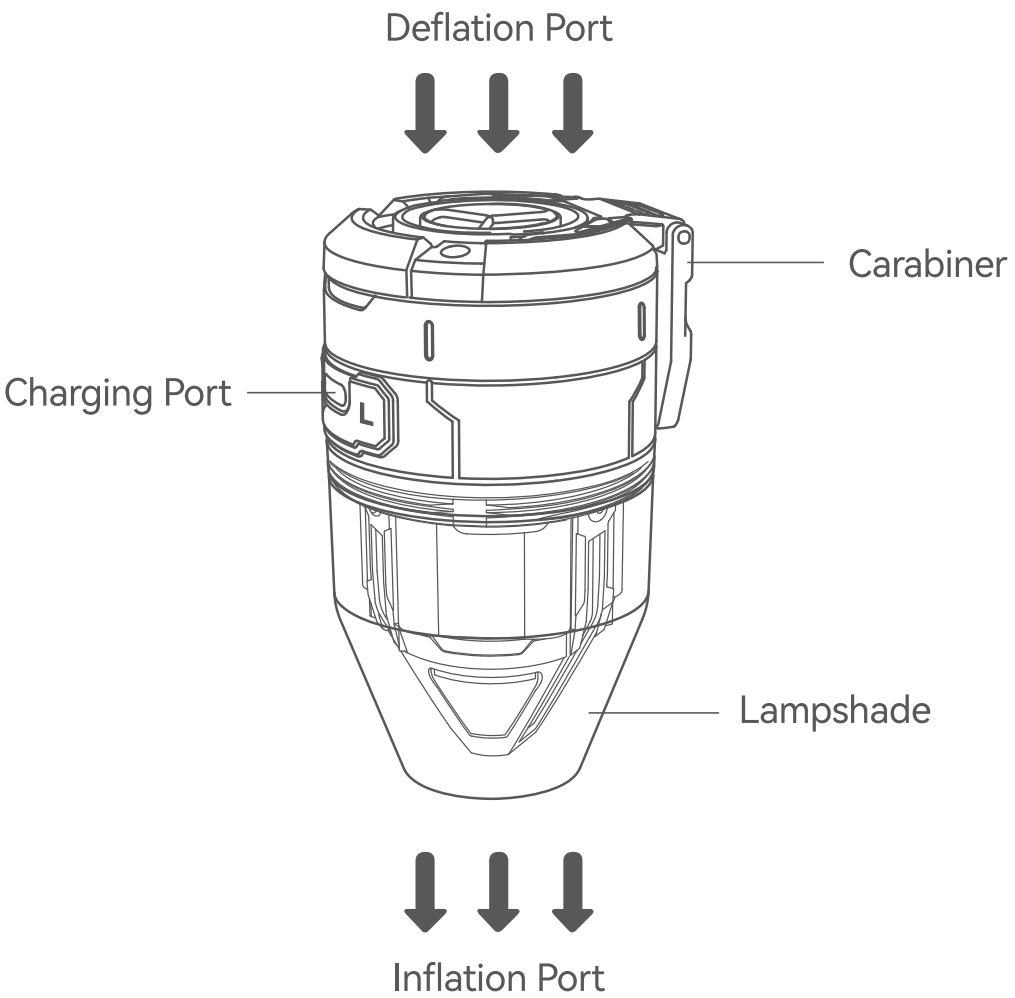

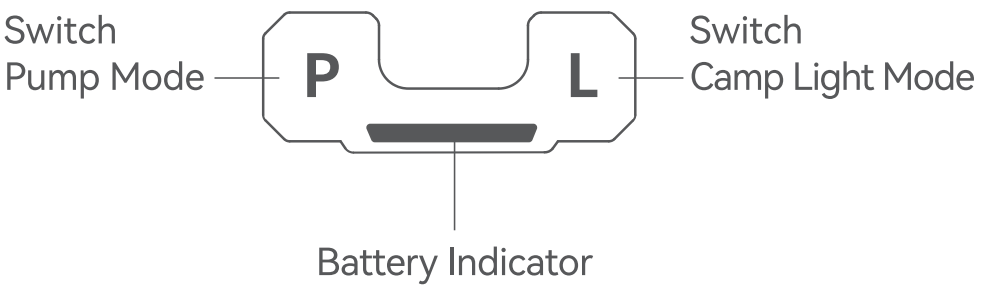


Nozzle

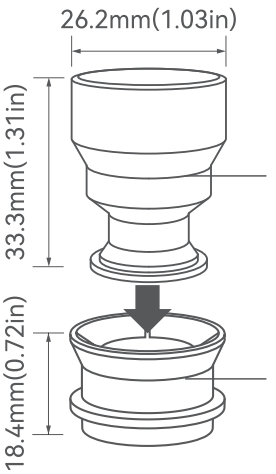


Used together for inflatable cushions


Can be used separately for inflatable boats

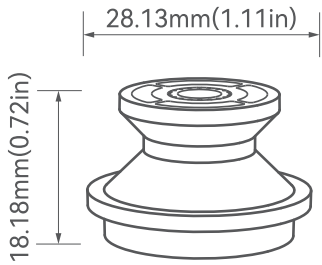


For 1/4 threaded nozzles

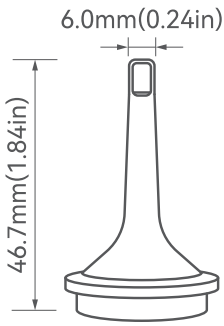


For swim rings/inflatable toys

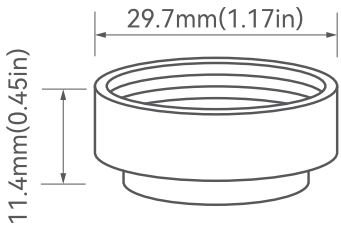

For vacuum storage bags

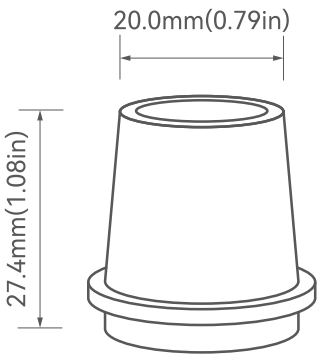


For inflatable beds / boats

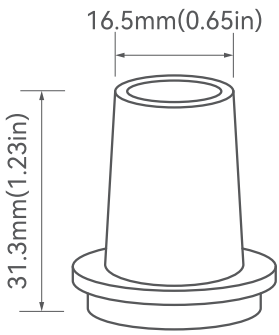


For inflatable beds / boats

DISPLAY INSTRUCTIONS

Charging Indicator

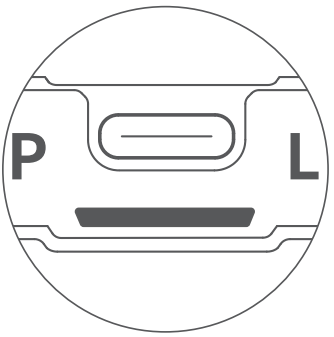


Type-C: 5V ⎓ 3A

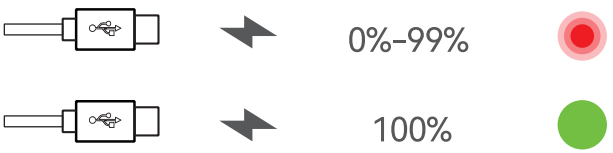


OPERATING INSTRUCTIONS


Inflation Mode

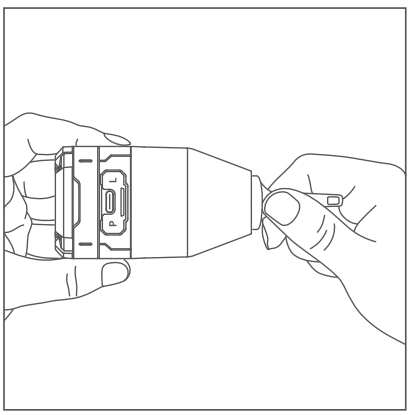


Choose the Appropriate Nozzle

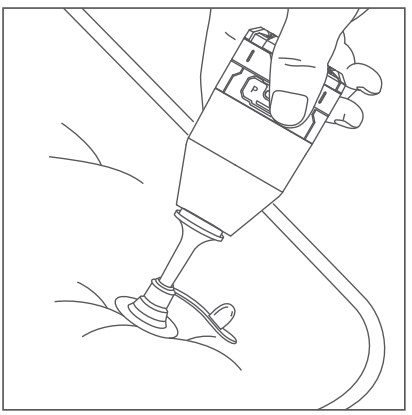

Connect to the Inflation Product

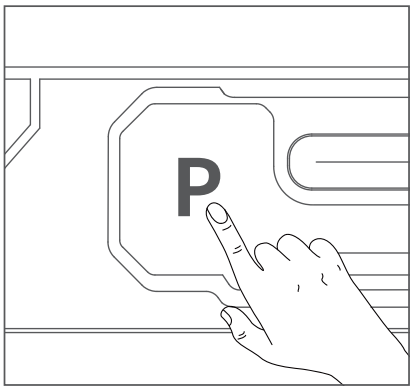


Double-click to Start

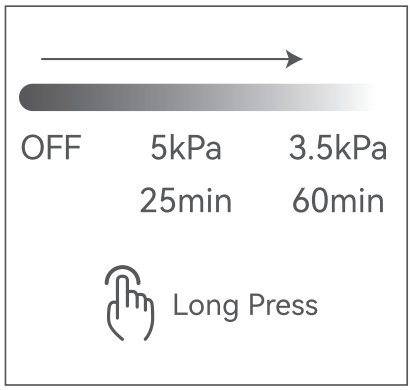


Long Press to Adjust Pressure


Deflation Mode

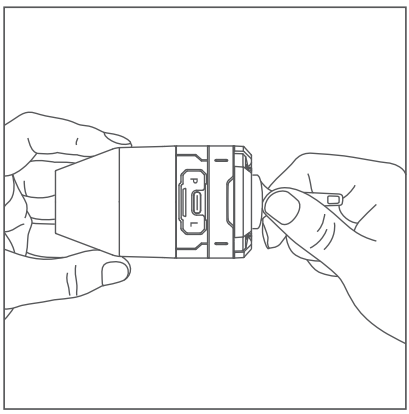


Choose the Appropriate Nozzle

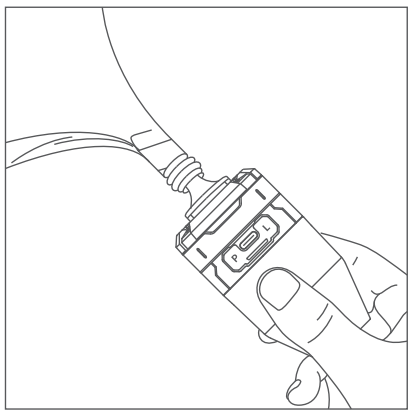

Connect to the Deflation Product

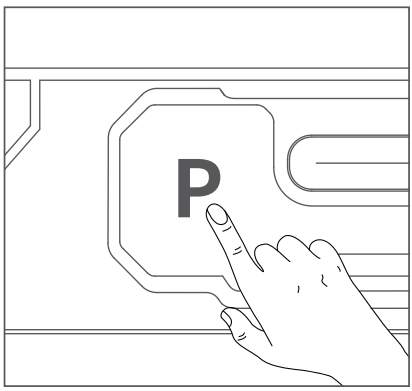


Double-click to Start

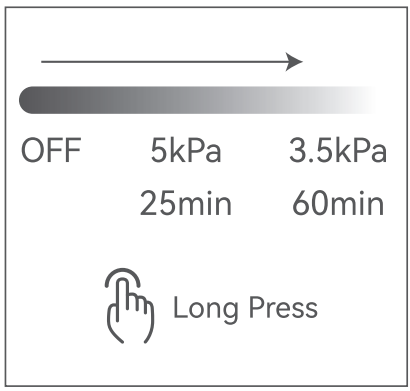


Long Press to Adjust Pressure


Camp Light Mode

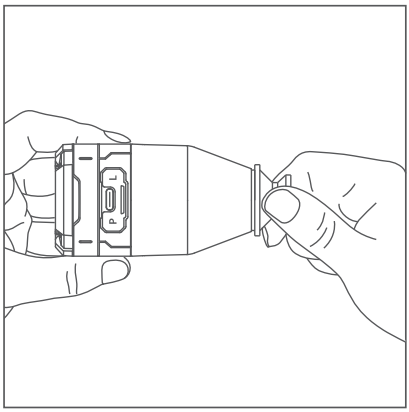


Connect the 1/4 Threaded Nozzle
(This step can be skipped.)

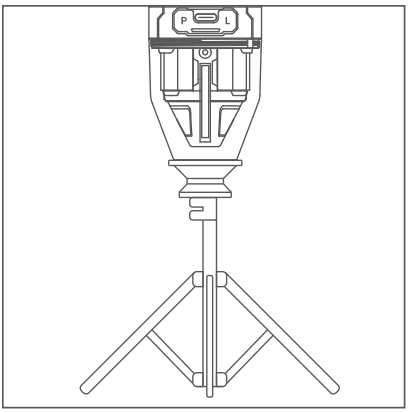


Attach the Tripod
(You will need to purchase the tripod separately.)

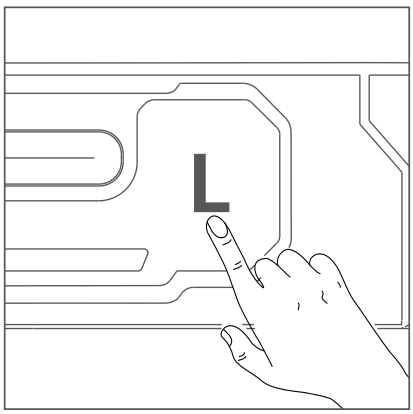


Double-click to Start

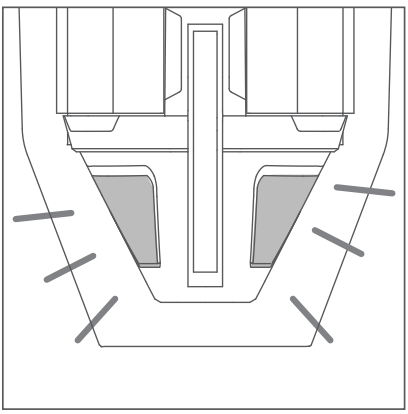


Camping Light

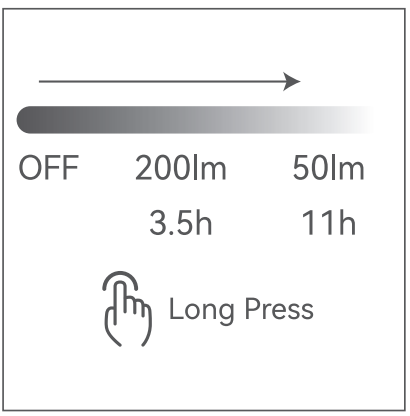


Long Press to Adjust Brightness

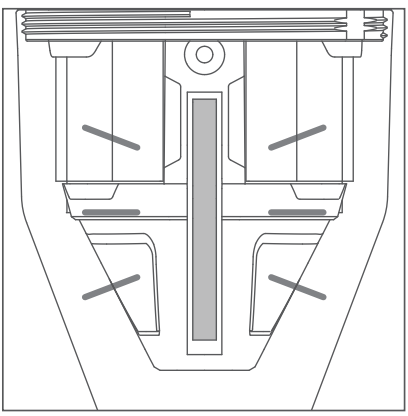

Press Again

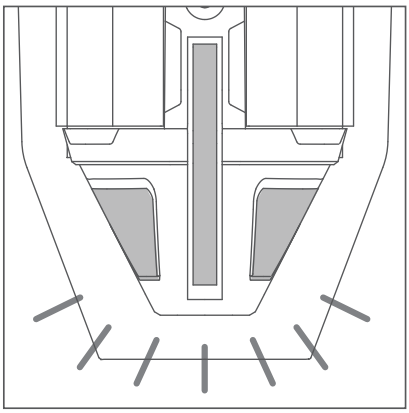

Press Again

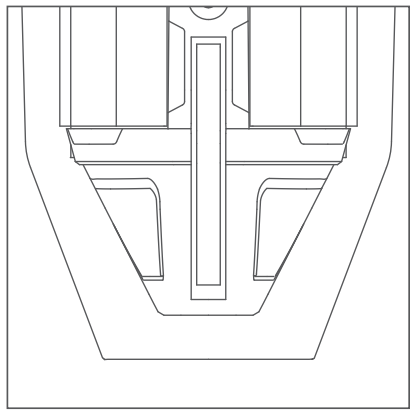

Click to Turn off

PARAMETERS

Name	MAX PUMP 3
Model	MP3G650
Weight	122±1g(4.3±0.04oz)
Size	84mm*48mm*48mm
Input	5V ⎓ 3A
Inflation Pressure	5±0.5kPa(0.73±0.07psi) MAX
Deflation Pressure	5±0.5kPa(0.73±0.07psi) MAX
Air Flow	500L/min(132.09gal/min) MAX
Endurance	25min(High Mode) 60min(Low Mode)
Rated Power	15W
Rated Capacity	7.215Wh(11.1V,650mAh)
Color Temperature	4500K
Luminous Flux	50lm-200lm/100lm/300lm
Package Contents	MAX PUMP 3, Type-C cable Manual, Storage bag, Nozzles

WARNING

- Do not use continuously for more than 10 minutes.
- Do not directly look into the inflation and deflation ports of this product during use.
- Do not insert fingers into the inflation and deflation ports of this product.
- Avoid placing this product in extremely cold, hot, or humid environments.
- Using strong chemicals or detergents for cleaning is prohibited..
- Before use, check for any abnormalities in the product. Do not use if any issues are found.
- Ensure that the inflation and deflation ports are not blocked at any time.
- Immediately stop using the product if there are abnormal sounds or excessive heat during use.
- Do not leave the product unattended during use to prevent accidents.
- This product is suitable for inflating products with pressures lower than 5kPa.
- Children under the age of 12 must use this product under adult supervision.
- Strong light can damage your eyes.
- The light source of this fixture is non-replaceable. When the light source reaches the end of its life, the entire fixture should be replaced.
- This product contains a lithium battery and is subject to specific transportation restrictions. Please check the packaging before transporting.
- Avoid storing the product with the battery fully depleted. Lithium-ion battery products should be charged at least every 3 months during storage.
- If you notice any battery leakage, strange odors, or deformations, immediately stop using the product and dispose of it safely.
- Do not attempt to repair or modify the product. If servicing is needed, please contact FLEXTAIL.

TROUBLESHOOTING GUIDE

- Plug in the charger to check if the battery is charged.
- Check if there is water or other liquid on the pump surface.
- Please check if the fan blades are stuck or obstructed by foreign objects.
- Please repeatedly press the switch to observe if the product starts.
- If you have any questions,please contact FLEXTAIL distributor or email to support@flextail.com

WARRANTY POLICY

- FLEXTAIL warrants its products against defects in raw materials and manufacturing processes for a period of two years from the date of purchase to customers who have purchased the product from an authorized retailer. For this product, the warranty period is two years.
- If customer discovers a hidden defect in the product, please return it to the place of purchase.If cannot return it to the dealer, please return it to the address we provide. We will repair or replace the product in accordance with the warranty terms. We will undertake the due obligations during warranty period based on warranty terms. The service will no longer be provided after the warranty expires. We reserve the right to request proof of your warranty claim.

PRODUCT DISCLAIMER

- Our warranties do not cover problems such as those caused by ordinary wear, modification or alteration of product, failure to follow directions, improper maintenance, accident demage, abuse, misuse, intentional demage or off-design use. This warranty gives you specific legal rights, and you may also have other rights which vary from purchase place. This warranty is expressly in lieu of all other warranties, express or implied, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose(If sales area prohibits exemption or limitation liability for incidental or consequential damages, or prohibits limitation of implied warranties, the above limitations or exclusions may not apply to you.)

- Both FLEXTAIL and FLEXTAILGEAR are legal registered trademarks of our company. The registered trademark FLEXTAIL and FLEXTAILGEAR are used for products in different batches. Both trademarks do not affect the use of the product.